SMART WIRELESS MICROPHONE

User Manual

Safety Instructions

Built-In battery

- Do not disassemble, modify, impact or squeeze the built-in battery by yourself to avoid damaging the battery, generating heat, and causing a fire.
- Do not put this product or battery into a fire or place it in a high-temperature environment, as it may cause the battery to catch fire or explode.
- Do not use the battery for other purposes.
- Do not use any damaged chargers or batteries.
- If the battery experiences abnormal phenomena such as high temperature, deformation, discoloration, swelling, or leakage during use, charging, or storage, please stop using it and contact after-sales to replace the battery to avoid safety issues.

Packing List
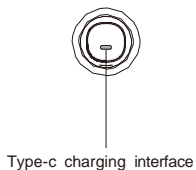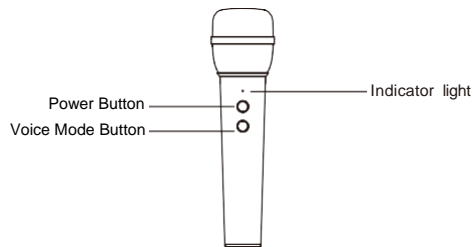
Microphone*2

Receiver

User Manual

Power cable

*2   *1   *1

Sponge head*4

- Thank you very much for purchasing this product. Please check if the physical product you received matches the list. If the products and accessories you receive do not match the list, please contact customer service promptly.

Key Function

Power Button ──── ○

Voice Mode Button ──── ○

Indicator light

Type-c charging interface

Power Button
- Press and hold the power button for about 2 seconds to turn on/off.

Voice Mode Button
- Short press the voice button to switch sound effects: KTV mode / Original sound mode / Special sound mode
- Each time the receiver is powered on again, the sound effect defaults to KTV mode.

Indicator light
- White light: The white light stays on when turned on and goes off when turned off.
- Red light:
  - The charging status keeps the red light on, and the fully charged light goes off when the device is turned off.
  - The low battery reminder status red light flashes.

Microphone and Receiver Pairing (in case of unsuccessful pairing)
1. Turn off the microphone.
2. Press and hold the power button and voice button simultaneously for 3 seconds until the white light of the microphone stays on and the red light flashes.
3. Insert the receiver.
4. Short press the power button to complete the code matching, successful code matching. The white light of the receiver stays on. The code operation was unsuccessful, and the white light flashes.

   NOTE: Actually, Microphone and Receiver will be pairing automatically by default

More Information

Please go to visit our website
https://www.ais.th/en/consumers/fibre/services/microphone
or scan QR Code

Call Center: 1175 (24 HOURS)